61963002GB.fm Page 10 Tuesday, July 12, 2005 10:49 AM

INSTRUCTIONS FOR USE

BEFORE USING THE COOKTOP

SUGGESTIONS FOR ENVIRONMENT PROTECTION

PRECAUTIONS AND GENERAL ADVICE

ENERGY SAVING TIPS

CARE AND MAINTENANCE

TROUBLESHOOTING GUIDE

AFTER SALES SERVICE

INSTALLATION

BEFORE USING THE COOKTOP

- **To get full satisfaction of your cooking hob, please read these instructions carefully and keep them for future consultation.**

- Keep the packaging material (plastic bags, polystyrene parts, etc.) out of the reach of children, as they are potentially dangerous.
- Check whether the cooking hob has been damaged during transport.
- **Ensure that the installation and electrical connections are performed by a qualified technician, following the manufacturer's instructions and in compliance with current local safety regulations.**

SUGGESTIONS FOR ENVIRONMENT PROTECTION

1. Packaging
The packaging material is entirely recyclable, and is marked with the recycling symbol ♺, which identifies it as a type of material that must be sent to local waste-disposal centres.

2. Product
This appliance is marked according to the European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE).
By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

The symbol on the product, or on the documents accompanying the product, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.
Disposal must be carried out in accordance with local environmental regulations for waste disposal. For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

PRECAUTIONS AND GENERAL ADVICE

- **Before any cleaning or maintenance operation, disconnect the cooking hob from mains power supply.**
- **In case of prolonged use, additional ventilation may be needed (opening a window or increasing the extraction force of the hood).**
- **Keep children away from the cooking hob when it is in use.**
- **After use, ensure that the knobs are in position zero.**
- **Never clean the appliance with high pressure water or steam cleaning equipment.**

Declaration of conformity CE

- This cooking hob is suitable for contact with foodstuffs, and complies with EEC Directive 89/109.
- This cooking hob (Class Y) has been designed to be used only for cooking. Any other use (such as heating a room) is improper and dangerous.
- This cooking hob has been designed, constructed and marketed in compliance with:
  - safety requirements of EEC Directive "Low voltage" 73/23;
  - protection requirements of EEC Directive "EMC" 89/336;
  - requirements of EEC Directive 93/68.

ENERGY SAVING TIPS

- The cooking hob is equipped with hotplates having different diameters. Use pots and pans whose bottom diameter is equal to that of the hotplates, or slightly larger.
- Only use flat-bottomed pots and pans.
- **Do not operate a hotplate without placing a container on it.**
- If possible, keep the container covered when cooking.
- Cook vegetables, potatoes, etc. with a small amount of water in order to cut down cooking time.
- A pressure cooker allows you to save even more energy and time.

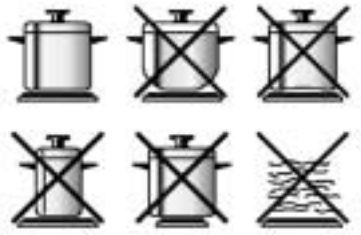

CARE AND MAINTENANCE

Important: Never clean the appliance with high pressure water or steam cleaning equipment.

Cleaning the hob

- **Before cleaning the cooking hob, disconnect it from mains power supply and wait until it has cooled down.**
- Wipe it with a cloth moistened with hot water and soap or diluted liquid detergent.
- Do not use abrasive or corrosive products, chlorine products or steel wool.
- Do not leave acid or alkaline substances, such as vinegar, salt or lemon juice, etc., on the cooking hob.

Stainless steel surface

- Clean it with a specific commercial product.

Note: if the cooking hob is used continuously, the high temperatures may alter the colour of the hotplates.

Cleaning the electric hotplates

The electric hotplates must be cleaned when they are lukewarm.
Wipe them with a cloth moistened with water and salt, and polish with a cloth moistened with oil.

TROUBLESHOOTING GUIDE

The hob does not work:

- Check for the presence of mains electrical power.
- Set the knob to **"0"** and switch on the hob again to ensure that the fault has been remedied.

The hob does not turn off:

- disconnect the hob immediately by disconnecting the power cable from the socket.

AFTER SALES SERVICE

Before you call the After Sales Service:

1. Re-start the cooktop, to check whether correct operation has been restored.
2. If the malfunction persists, call the After Sales Service.
   Give the following information:
   - **type of malfunction;**
   - **model of cooktop;**
   - **service number (i.e., the number that follows the word SERVICE on the rating plate under the cooktop and on the guarantee paper);**
   - **your complete address;**
   - **your telephone number and area code.**

If any repairs are required, please contact **an authorised After-Sales Service,** as indicated in the warranty.

In the unlikely event that an operation or repair is carried out by an **unauthorised technician,** always request a certification of the job carried out and insist on the use of **original spare parts**.

Failure to comply with these instructions may compromise the safety and quality of the product.

61963002GB.fm Page 14 Tuesday, July 12, 2005 10:49 AM

INSTALLATION

Technical information for the Installer

This cooking hob can be embedded in a worktop 20 to 50 mm thick.
If another appliance is not fitted under the cooking hob, insert a separator panel, at a distance of at least 90 mm from the cooking hob bottom.

- **If a vertical piece of furniture is installed, there must be a gap of at least 100 mm between it and the edge of the cooking hob.**

Installation of cooking hob

- **Apply the supplied gasket to the cooking hob (unless it has already been fitted), after having cleaned its surface as shown in the figure.**

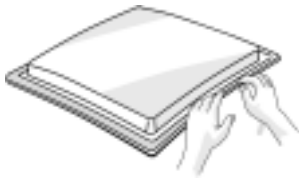

A - If the worktop is made out of wood, use the springs supplied.

1. Fit the 4 springs (A) into the relevant seat under the box.
2. Make an opening in the worktop, respecting the dimensions indicated in the enclosed product description sheet.
3. Install the cooking hob in the worktop.

B - If the worktop is made out of marble or other materials (plastics, ceramics or stone), the cooking hob must be fixed by means of brackets (B), to be ordered from the After-Sales Service (code 4819 310 18528).

1. Align the brackets with the bores and fix them with the screws.
2. Make an opening in the worktop, respecting the dimensions indicated in the product description sheet.
3. Install the cooking hob in the worktop.

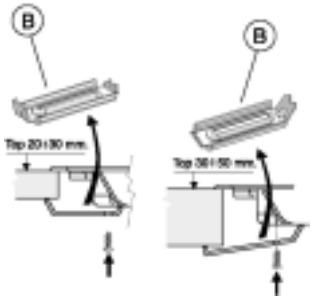

- **Before installing the cooking hob, remove the plastic film that protects it, if present. The outer surfaces of the furniture or appliances adjoining the cooking hob must be heat resistant (heat protection "Y", according to standards EN 60335-2-6).**
- **Installation must comply with current local safety regulations.**

INSTALLATION

Electrical connection

- **The electrical connections must comply with local regulations.**
- **The data relevant to the voltage and power absorption are indicated on the rating plate.**
- **The earthing of this appliance is compulsory by law. The manufacturer cannot be held responsible for injury to persons or animals or damage to property arising from failure to comply with these requirements.**
- **When the cooking hob is installed, provide a single-pole circuit breaker with a contact breaking distance of at least 3 mm.**
- **After installation, the electric parts must not be accessible.**
- **The cooking hob must be earthed and fitted with fuses adequate to the hotplate rating.**
- **For electrical connection, use an H05RR-F cable (see table in product description sheet).**

ELECTRICAL COOKING HOBS WITH SIDE CONTROLS

Connection to terminal board

1. Open the cover of the terminal board and loosen screw Ⓐ by means of a tool, as shown in the figure.
2. Unsheathe the cable for about 70 mm.
3. Peel off the internal cables for about 10 mm loosen cable clamp screw Ⓑ, and insert the cable in the cable clamp.
   - **The terminal board has 4 terminals:**

   1-2 interconnected (line)

   3 (neutral)

   4 (earth): marked with symbol ⏚.
4. Connect the cable to the terminal board, following the indications of the connection diagram punched on the bottom of the cooking hob. Fasten the cable clamp and close the cover.